





Houtdraaiwerken-penkits

PK94 Shaving Brush Kits Assembly Instructions

Required Accessories

- 7mm pen mandrel
- 7mm Drill bit -DB007 of RSDB007
- 7/8" dia Forstner bit
- 2 pcs. bushings set BU94

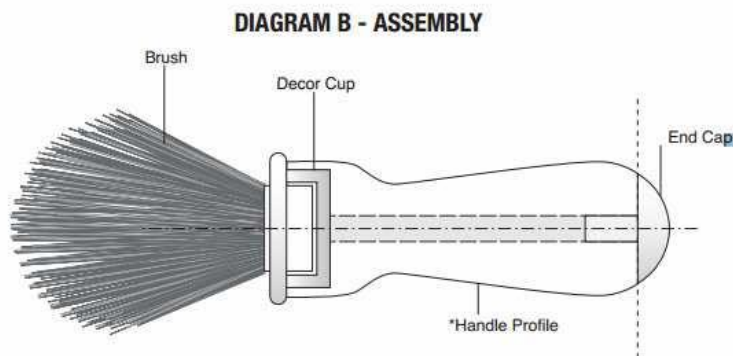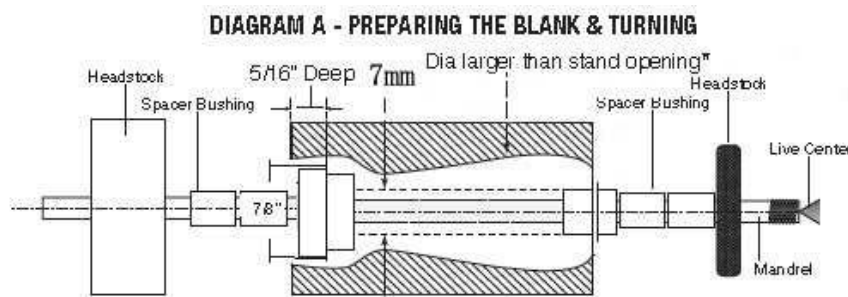

Preparing & Turning The Blank/Assembly

Prepare a blank (wood or acrylic) min of 1-1/2" x 1-1/2" x 2-1/2"

Drill a hole 5/16" deep, in one end with a 7/8" forstner bit.

Use the center mark of the forstner bit to center and drill a 7mm hole through the blank.

Mount the bushing and blank over the mandrel according to Dia. A .

Turn the blank to the profile suggested in Dia A in order for the brush to hang correctly. Follow the measurements indicated. **IMPORTANT:** Turn the profile of the blank to fit your stand opening.

Finish the handle with waterproof sealer for wood.

Remove the handle off the mandrel. Glue the brush base into the decor cup. Glue the assembly into the recess in the handle. Glue the end cap into the opposite end of the handle.