



Houtdraaiwerken-penkits


BPCL13 Olst Clicker Pen Kits Assembly Instructions

Required Accessories:

- 7mm Pen Mandrel
- Drill Bit DB3/8
- Bushing set(2 pc) BU13

Preparing the Blank:

- Cut 1 blank to the length of the tube off.
- Drill a hole lengthwise through the blank.
- Spread glue over the tube, insert the blank with a twisting motion to spread the glue evenly inside.
- Center the tube lengthwise inside the blank.
- When the glue is dry, square the end of the blank. Use barrel trimmer or a universal pen blank squaring jig with a power disc sander. Take the excess material down flush with the ends of the brass tube. (do not trim beyond the length of the tube since this may interfere with operation of the mechanism and assembly).

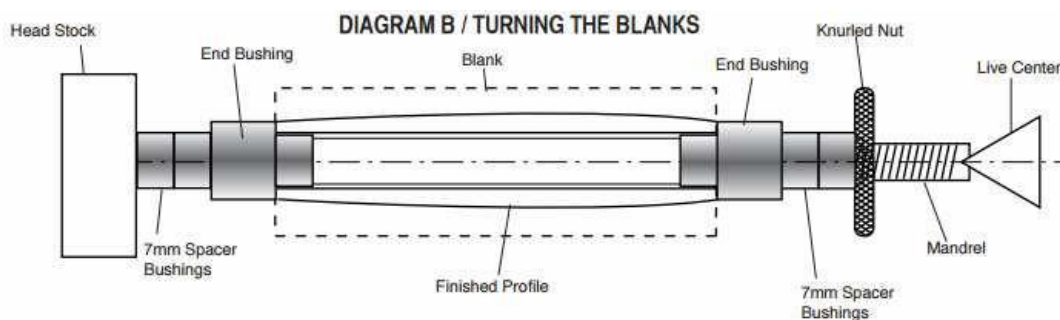

Turning the Blank


- Mount the bushings and blanks according to diagram B.
- Thread on the knurled nut and hand tighten to hold all components in place.
- Slide the tailstock up snugly against the mandrel shaft inserting the live center point into the mandrel dimple, lock in place.
- Hand tighten the quill adjustment to firm up the mandrel. (DO NOT overtighten, it could damage the mandrel)
- Using sharp tools, turn the blank down close to the bushing diameter. Turn

the barrel (straight or to a profile of your choice)

- Sand the blank down to be flush with the bushings gradually increasing the sandpaper grits.
- Finish the barrel with your choice of polish. Allow sufficient time for the polish to cure. Refer to polish instructions.

Diagram A

Assembly

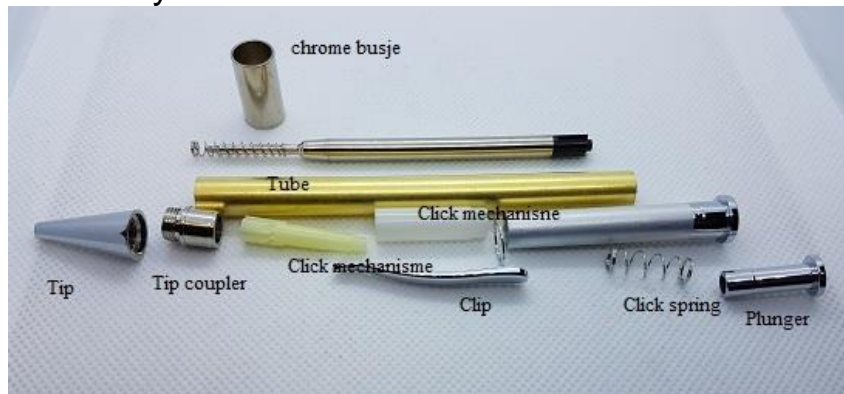

Layout parts according to diagram A
you do not need the chrome busje. if you follow the instruction below

press the white click mechanism + clip into the plunger holder. see photo below. Note that it must be pressed 4.5 to 5 mm. Use here for a piece of wood that you can run first. Turn the wood so that it fits into the plunger holder and then turn a small tip at the end that fits into the click mechanism. This so that nothing is damaged



- Press the tip coupler, recessed end in first into either end of the tube.
- Press the clip assembly into the opposite end of the tube.
- Put the click mechanism into the clip assembly
- Affix the spring over the tip of the refill.
- Drop the refill into the opening at the tip coupler.
- Screw the tip over the refill, into the tip coupler.
- Put the click spring into the clip assembly, screw the plunger over the threads at the click assembly opening.
- The pen works by clicking on the plunger to advance or retract the refill tip.